

PRO 120 SPRAY INSTRUCTIONS



1 PREP THE SURFACE

Ensure all vehicle elements are wiped down with **DIAMOND BODY PREP**.



3 APPLY COATING

Apply the respective coating to 1-2 elements of the car evenly. Apply more product as necessary.



2 SHAKE THE BOTTLE

Shake **PRO 120 SPRAY A**, **PRO 120 SPRAY B**, and **PRO HYDRO² SPRAY** well for 15 seconds or longer, respectively. Attach each respective coating to the spray gun adapter.



4 WAIT & WIPE


For **PRO 120 SPRAY A**, wait 1-3 minutes, then wipe off the excess coating. Try to look for a hazing effect indicating the coating is ready to be wiped off. Wait 1 Hour before applying **PRO 120 SPRAY B**. Clean spray gun with **PRO SOLVENT SPRAY**.

For **PRO 120 SPRAY B**, wait 1-3 minutes, then wipe off the excess coating. Try to look for lines and droplets indicating the coating is ready for wipe-off.

Wait 1 Hour before applying **PRO HYDRO² SPRAY**. Clean spray gun with **PRO SOLVENT SPRAY**.

For **PRO HYDRO²**, wait 3-5 minutes, then wipe off the excess coating. Try to look for lines and droplets indicating the coating is ready for wipe-off.

(Wipe off time may vary due to ambient temperature, humidity, and substrate type.)

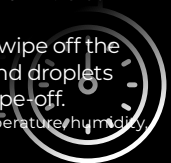

INSTALLATION TIPS

- For use on all body panels, plastic trim, headlights, and chrome accents.
- Do NOT use on windows.
- Use separate microfiber towels for wiping off **Diamond Body Prep**, **PRO 120 Spray A**, **PRO Spray 120 B** and **PRO Hydro² Spray**.
- Polishing is not required before application, but is strongly recommended.
- If you experience a high spot while coating, re-apply **PRO 120 Spray A**, **PRO 120 Spray B** or **PRO Hydro² Spray** to the affected surface & immediately wipe off.

SCAN TO WATCH INSTRUCTION VIDEO!

