


PRO WHEELS SPRAY INSTRUCTIONS

1 PREP THE SURFACE

Ensure Wheels are wiped down with **DIAMOND BODY PREP**.

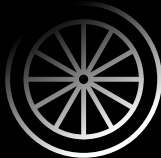

2 SHAKE THE BOTTLE

Shake **PRO WHEELS SPRAY** well for 15 seconds or longer. Attach **PRO Wheels Spray** to the spray gun adapter.



3 APPLY COATING

Apply the coating evenly to the wheel. Apply more product as necessary.



4 WAIT & WIPE

Wait 1-3 minutes, then wipe off the excess coating. Try to look for a hazing effect indicating the coating is ready to be wiped off.
(Wipe off time may vary due to ambient temperature, humidity, and substrate type.)



INSTALLATION TIPS

- For use on wheels, suspension, undercarriage, and engine components.
- Use separate microfiber towels for wiping off **Diamond Body Prep** & **PRO Wheels Spray**.
- Polishing is not required before application, but is strongly recommended.
- If you experience a high spot while coating, re-apply **PRO Wheels Spray** to the affected surface & immediately wipe off.
- Utilize the advantage of sprayability to coat hard to reach areas.

SCAN TO WATCH INSTRUCTION VIDEO!

